

AUTION! • CAUTION! • CAUTION! • CAUTION! • CAUTION!

WHOA!!! CAUTION NOT SO FAST



This product is made out of MDF / Supawood and is fragile of nature.

We recommend all pieces to be test fitted and if required contact pieces to be filled / sanded down for a better fit.

**PLEASE DO NOT FORCE FIT ANY PIECES AS IT
WILL BREAK!**

ENJOY BUILDING YOUR NEW MODEL.

IT IS RECOMMENDED TO GO THROUGH ALL THE PAGES AND SEE / UNDERSTAND EACH STEP BEFORE STARTING THE ASSEMBLY.

FULL QUALITY IMAGES AVAILABLE AT WWW.WOWWE.CO.ZA, IT WILL ASSIST WITH THE ASSEMBLY, THERE IS A DOWNLOADABLE LINK AS WELL OF THIS ASSEMBLY GUIDE.

Tips / Recommendations:

- *Use alcohol wipes to clean / remove all the laser burn marks prior to assembly.*
 - *Use normal wood glue for the assembly.*
- *Seal the model post completion with any clear wood sealer or paint, this will ensure the preservation of your new model for years to come.*
 - *We recommend chalk paint.*
- *Remember this is wood, if you break something you can always just glue it back.*


3D WOODEN MODEL




MB_03: Dirt Bike Assembly Guide

Step 01


Parts

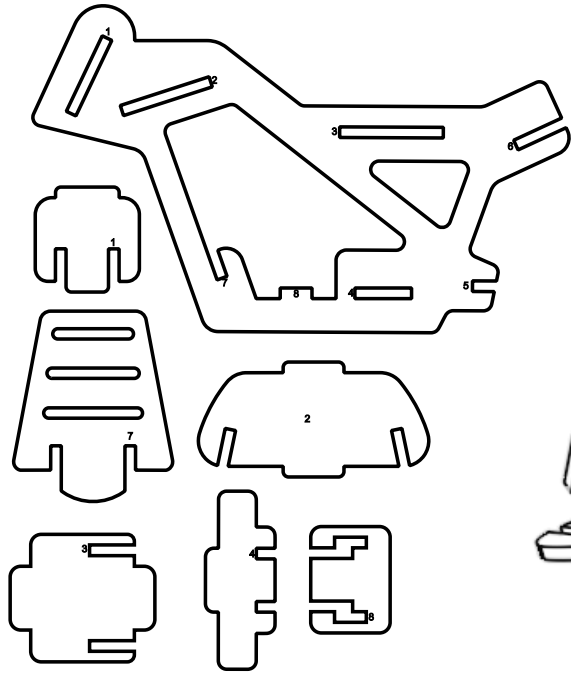


3D View

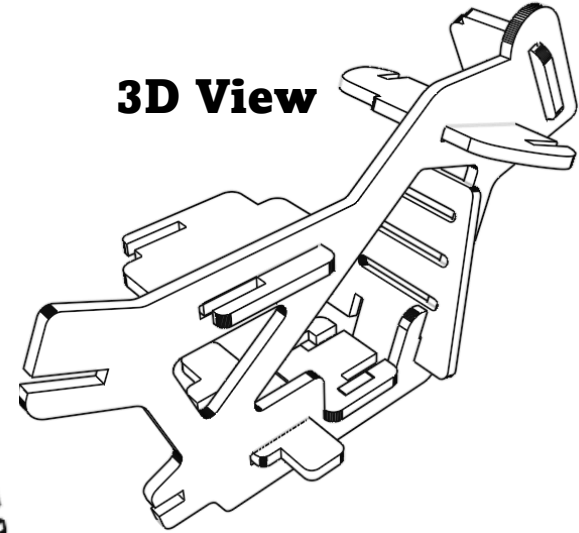

3D View

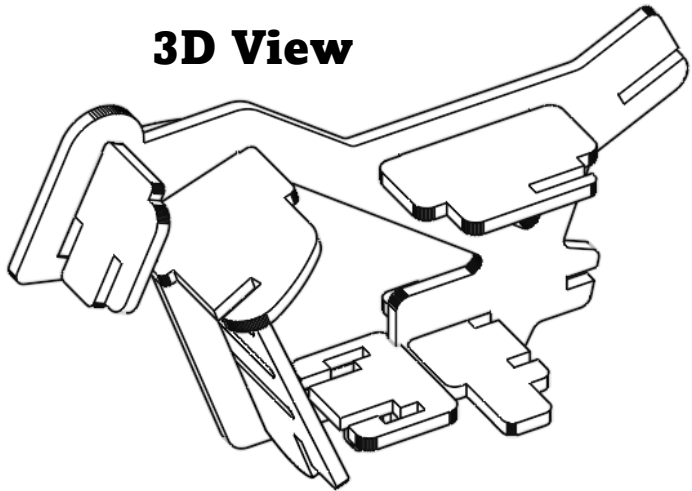


3D View

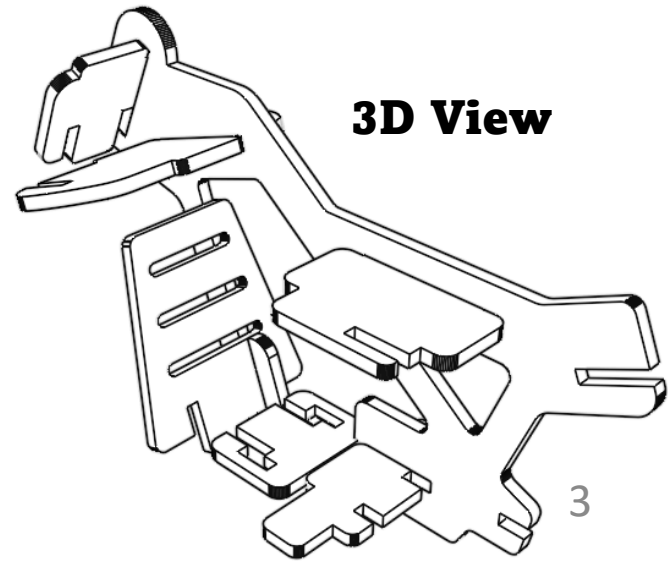


Step 02


Parts

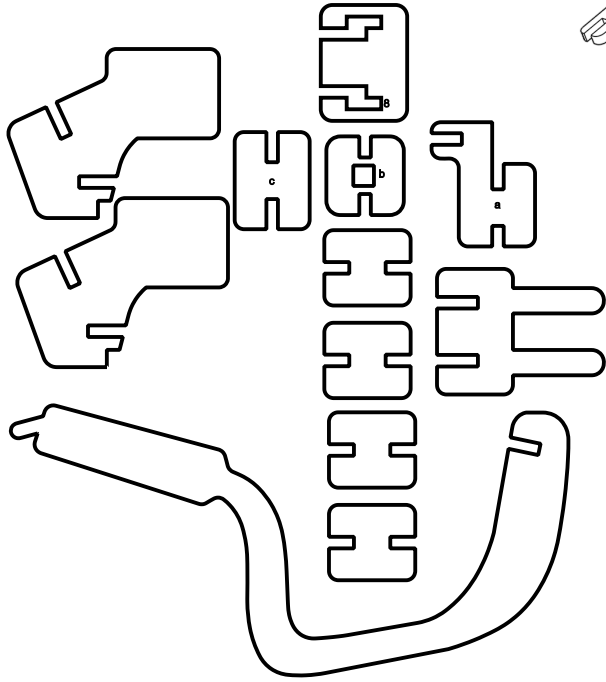

3D View

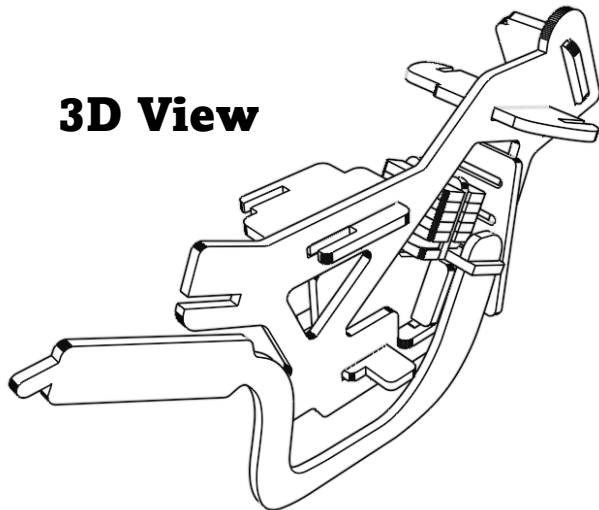



3D View

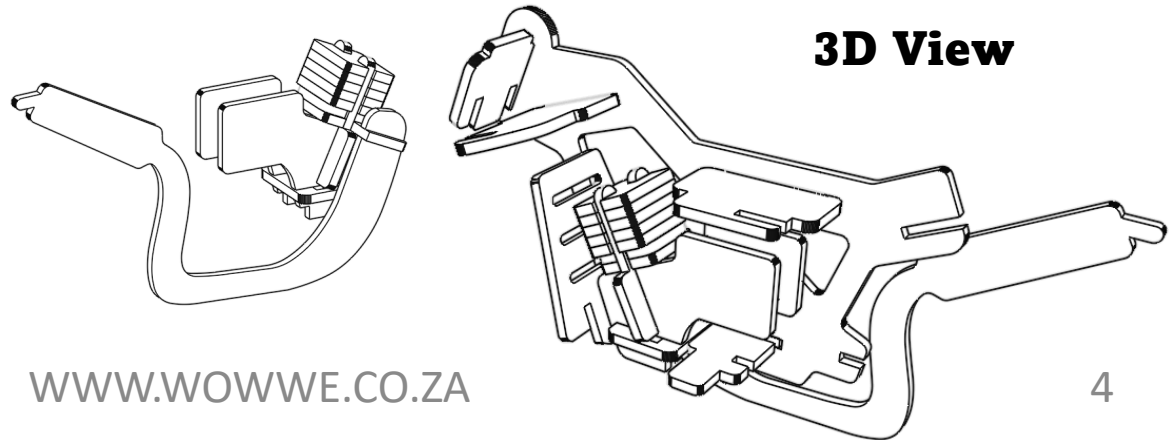


Step 03




Parts

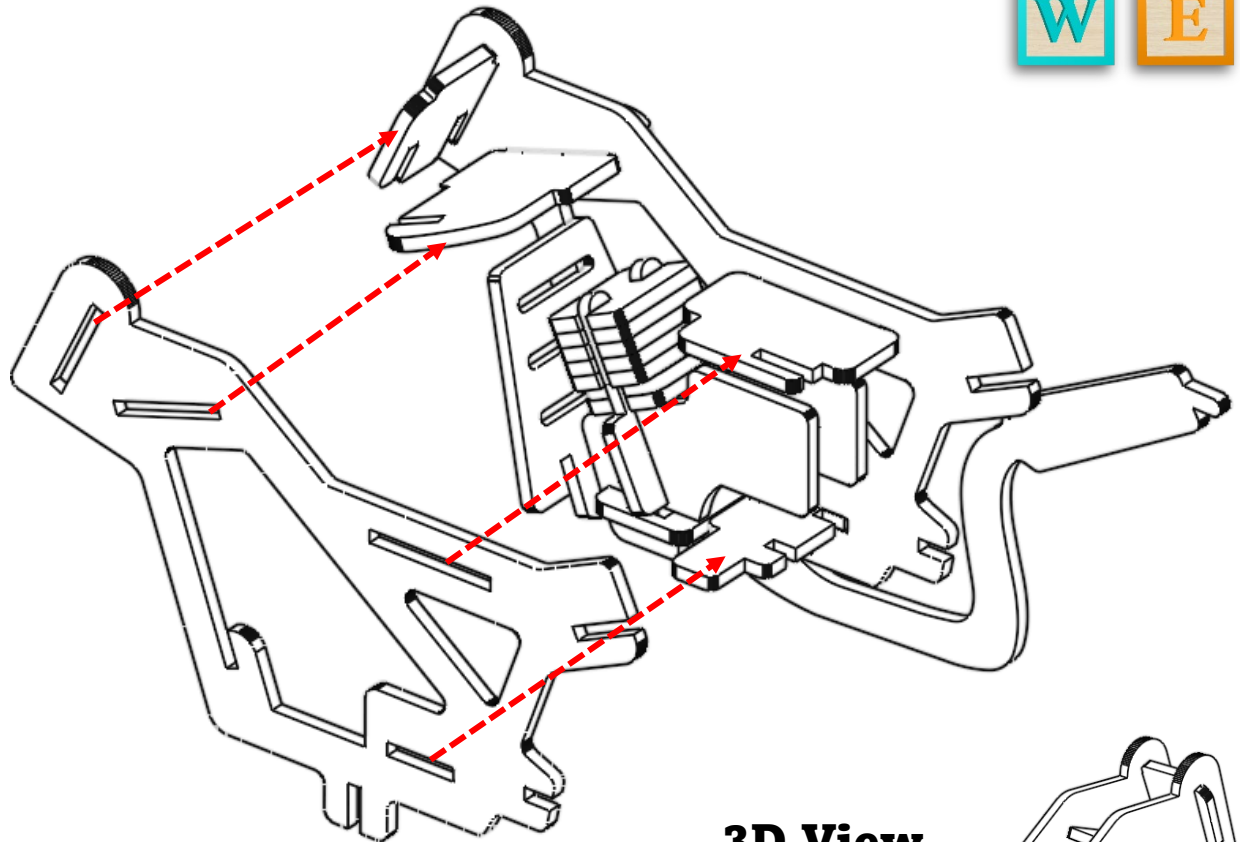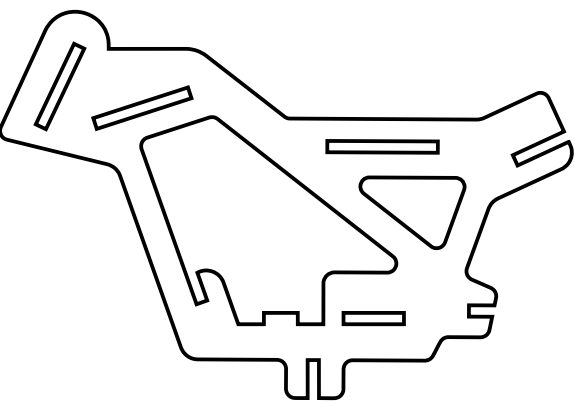

3D View

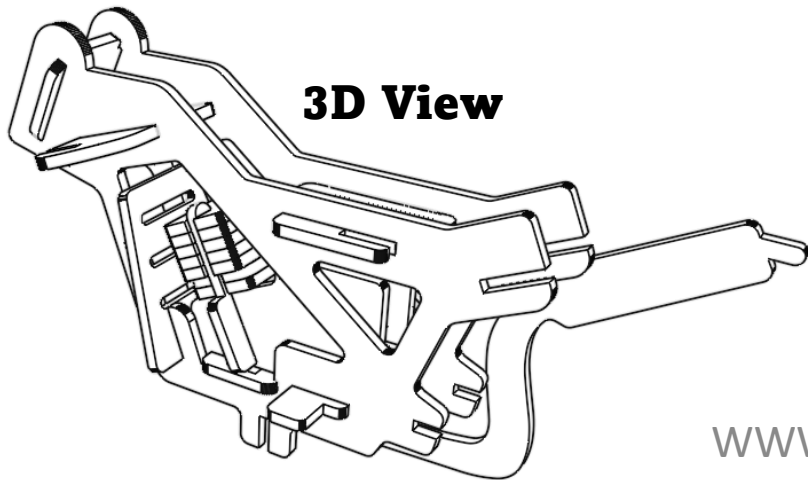





3D View

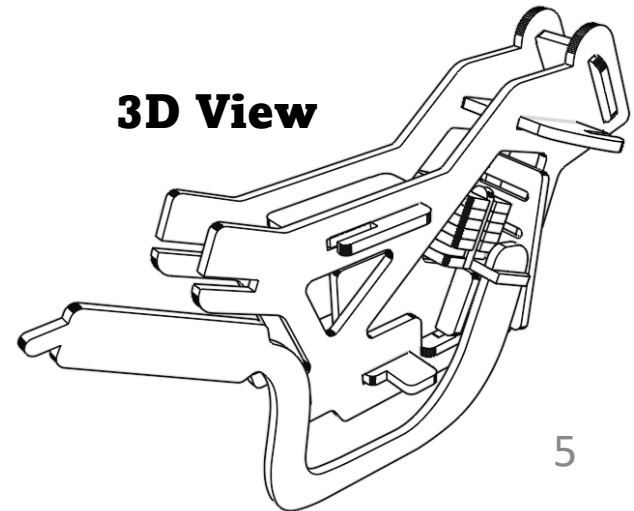


Step 04




Parts

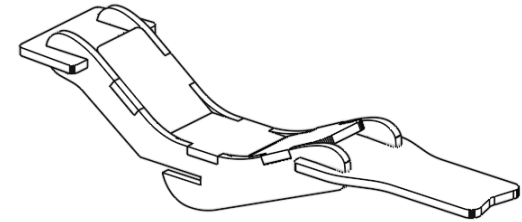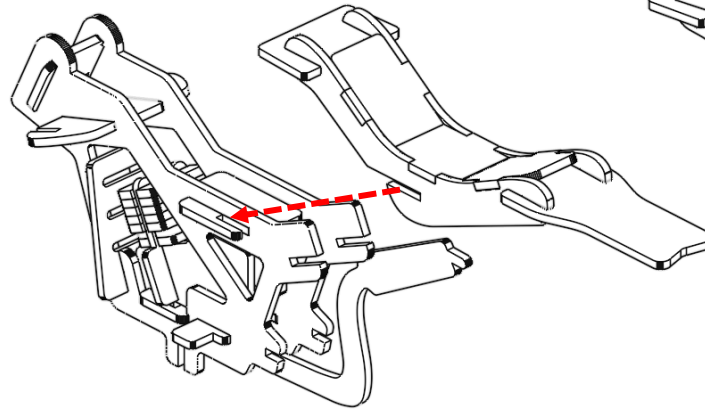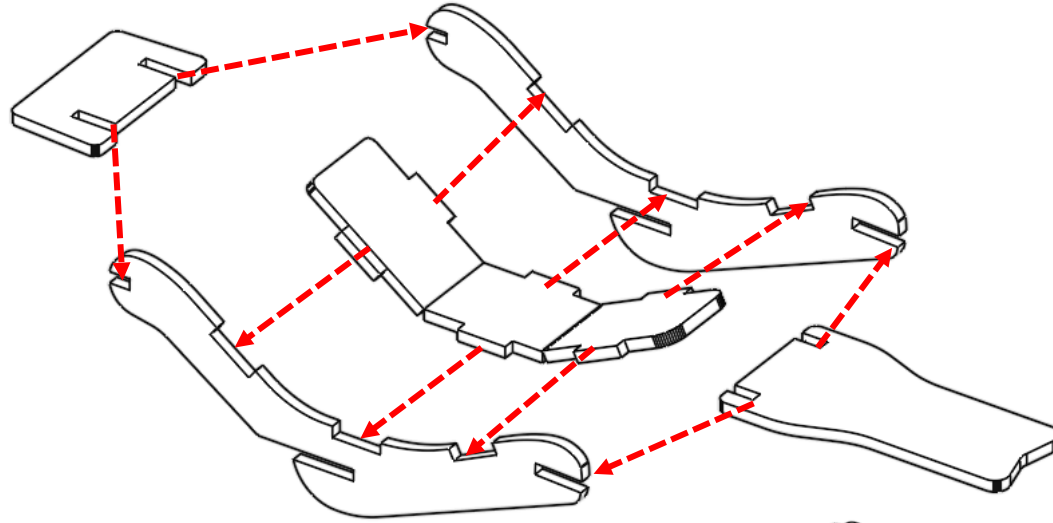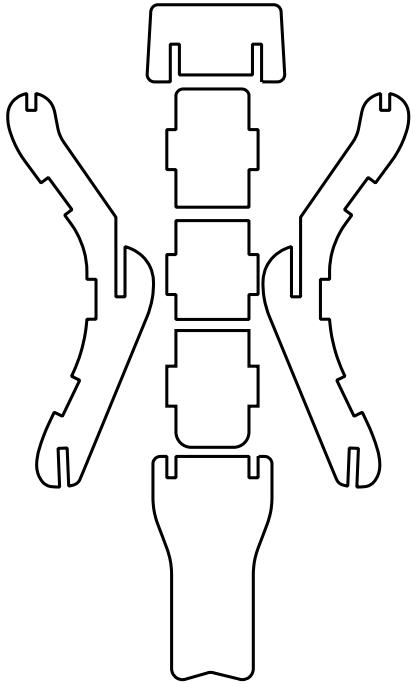

3D View


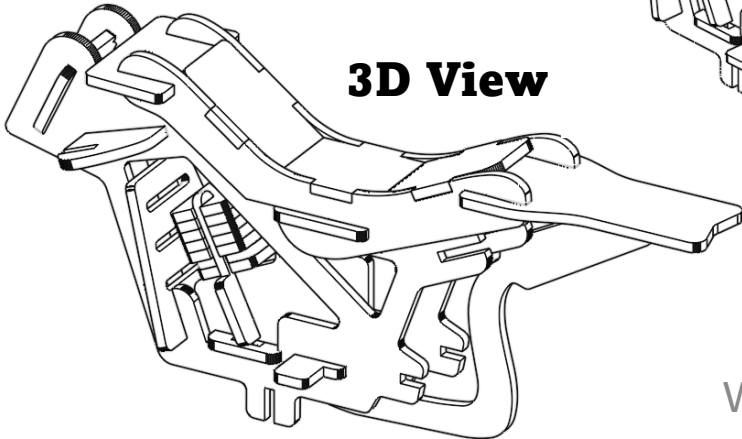


3D View

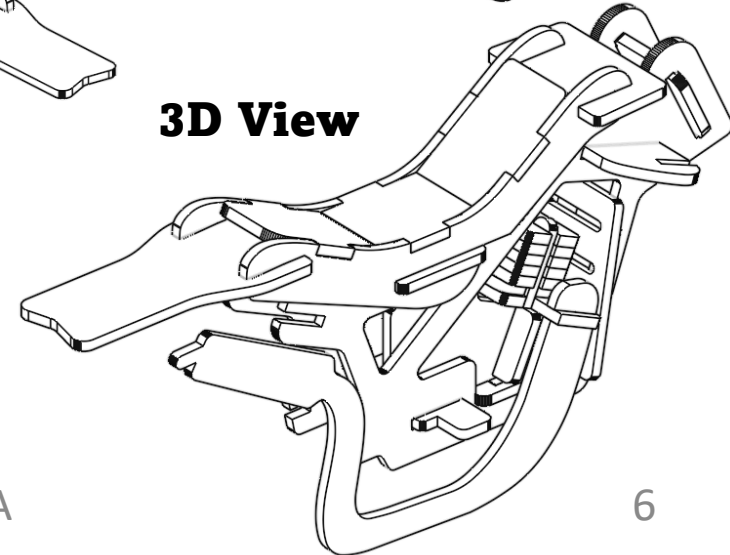


Step 05



Parts

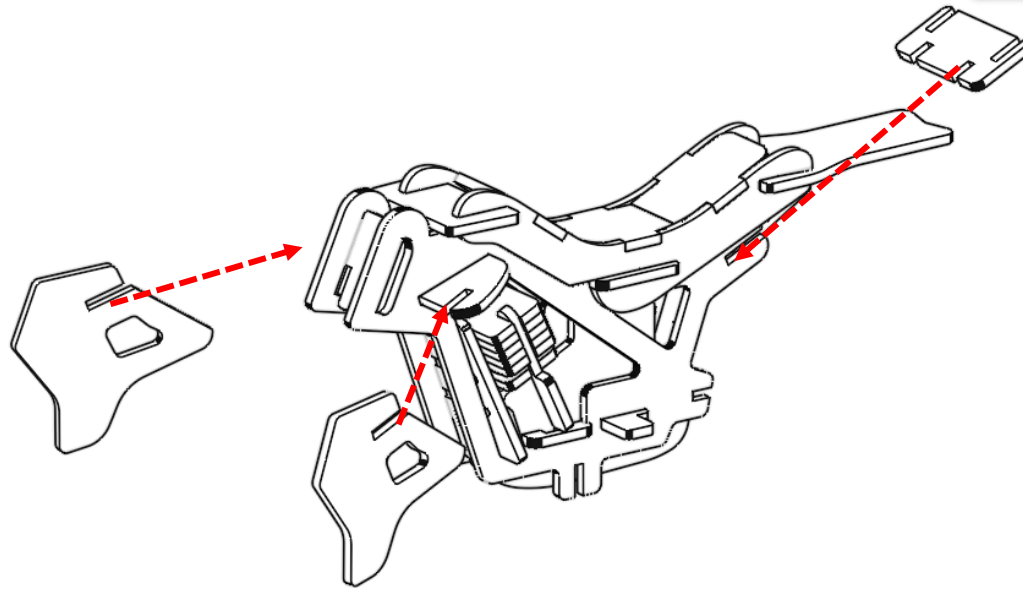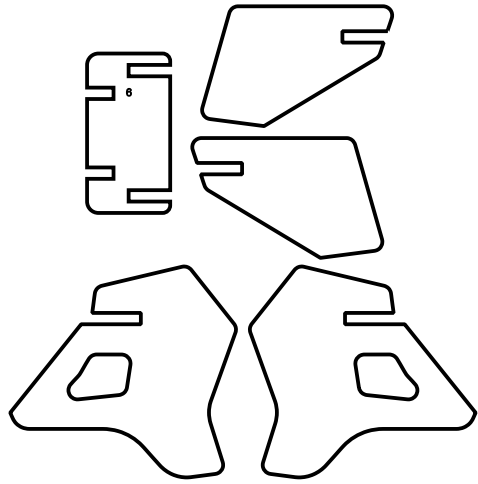

3D View



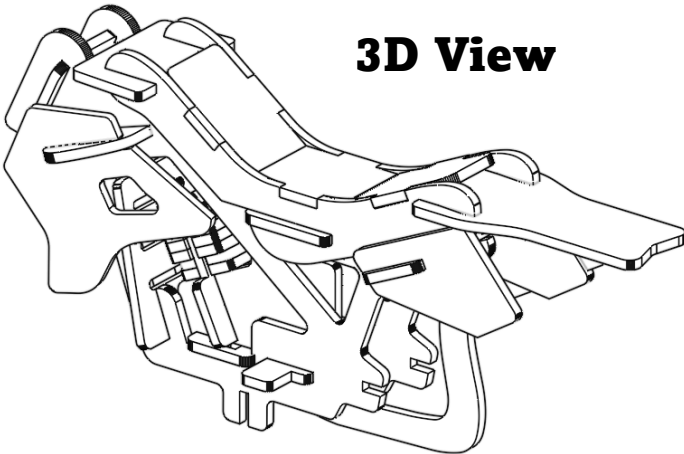


3D View

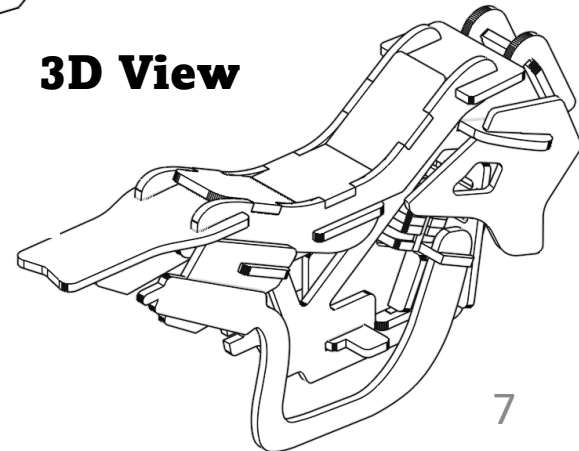
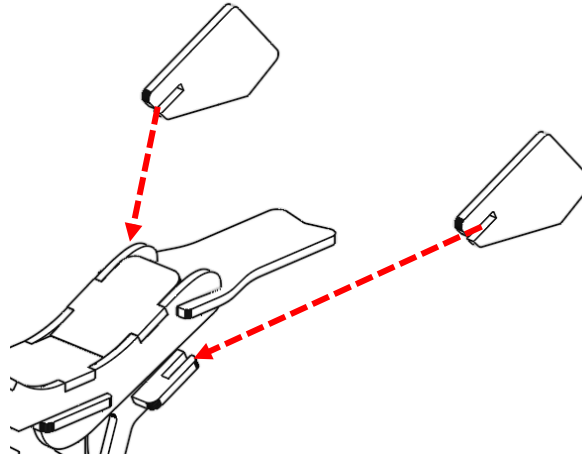


Step 06


Parts

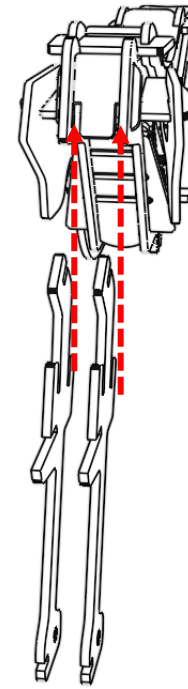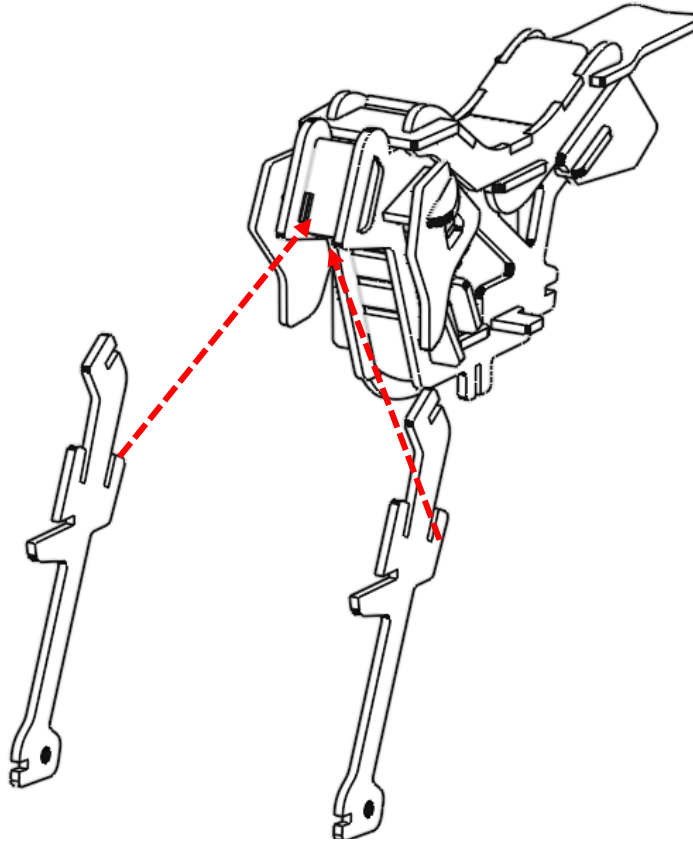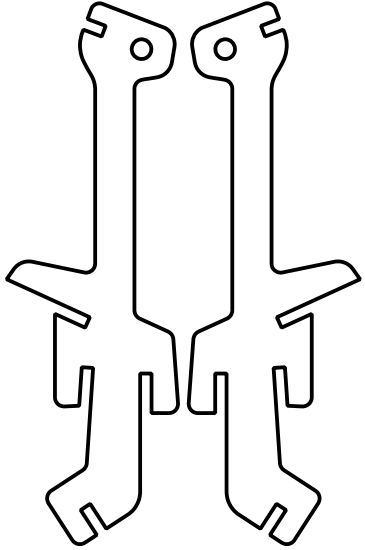

3D View


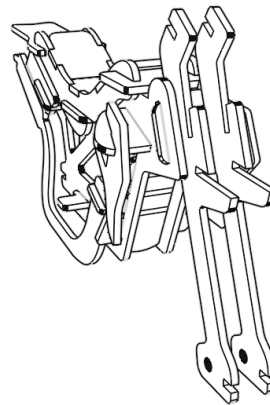
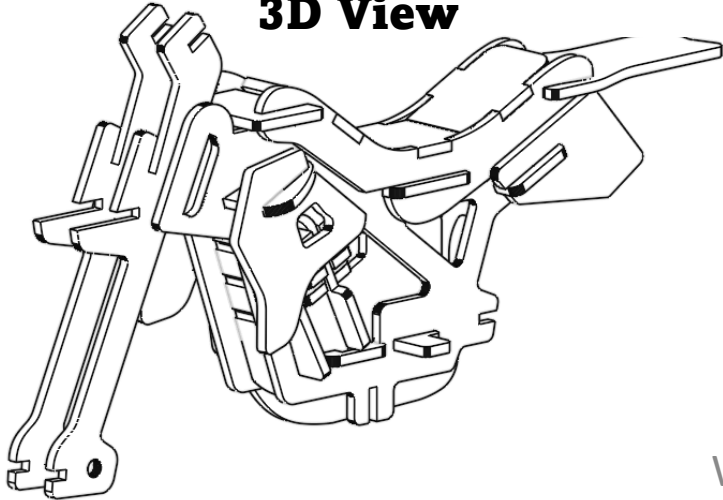


3D View

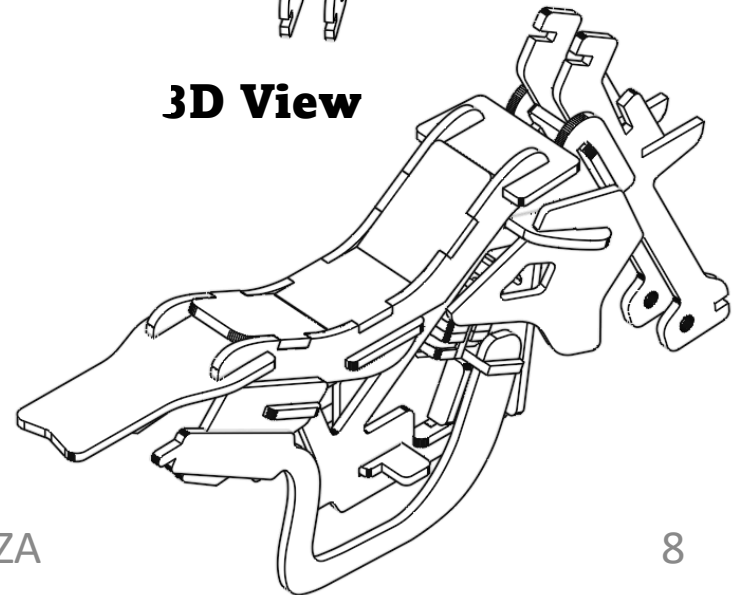


Step 07


Parts

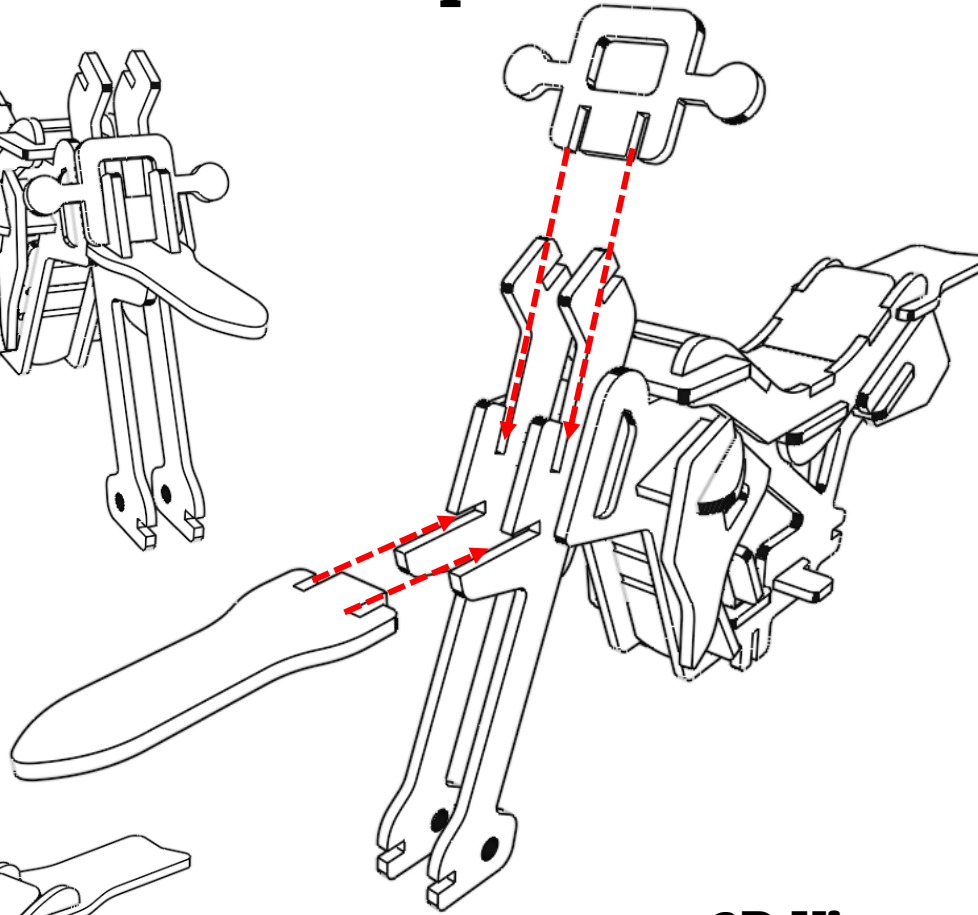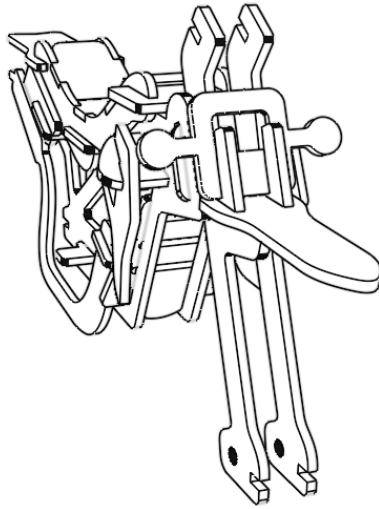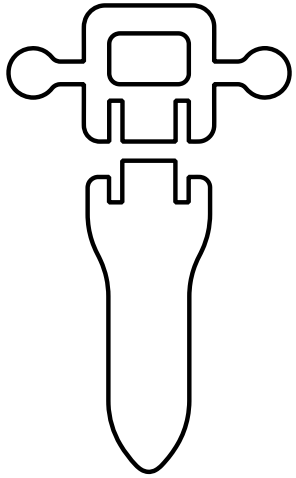

3D View

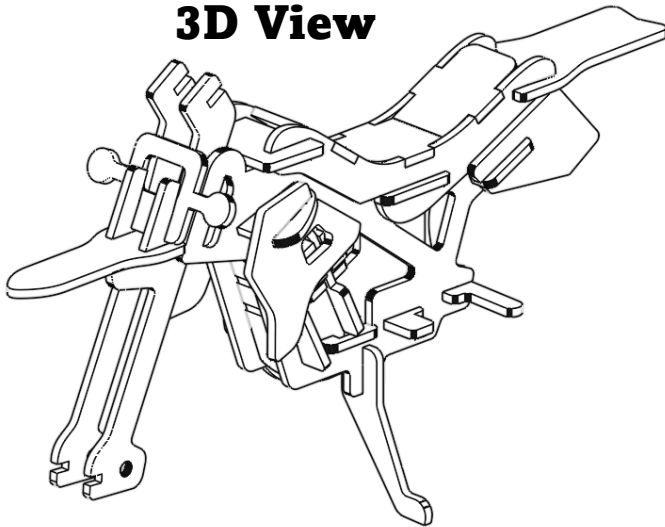



3D View

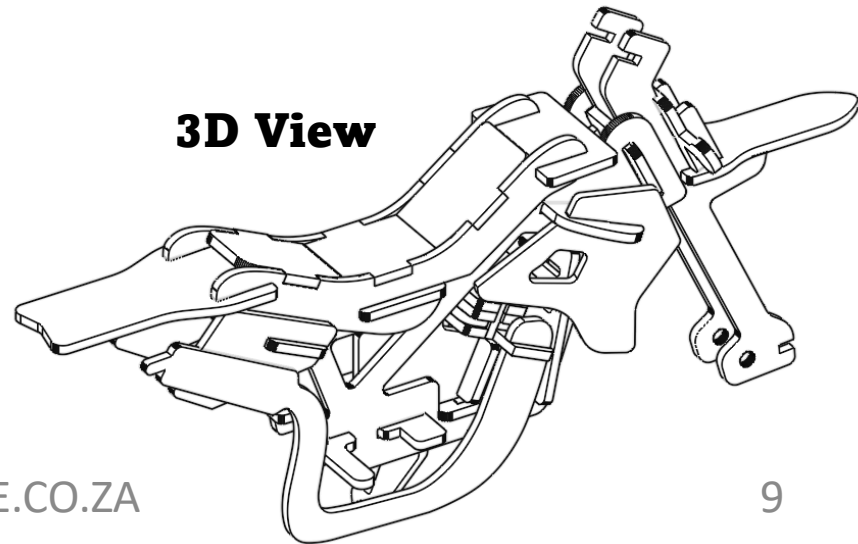


Step 08




Parts

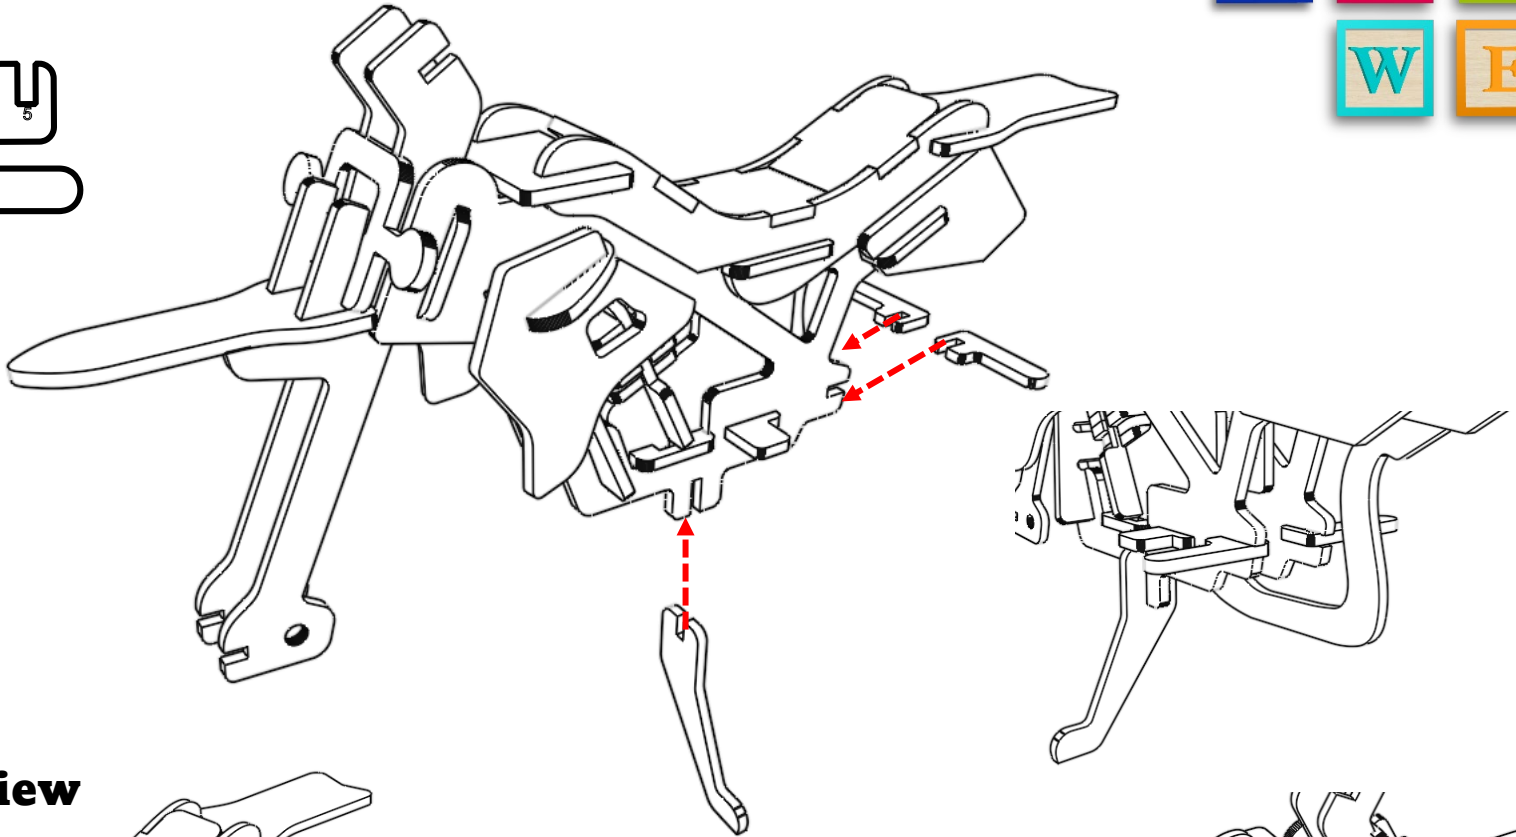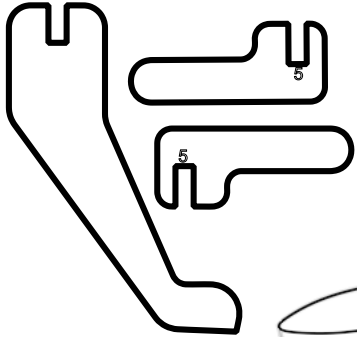

3D View

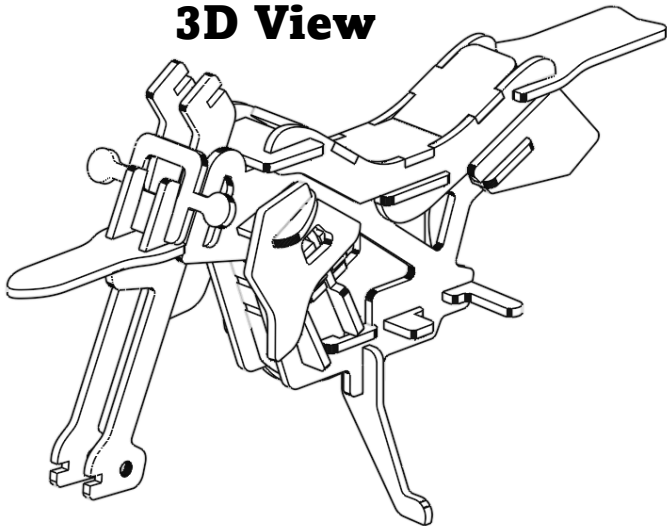



3D View

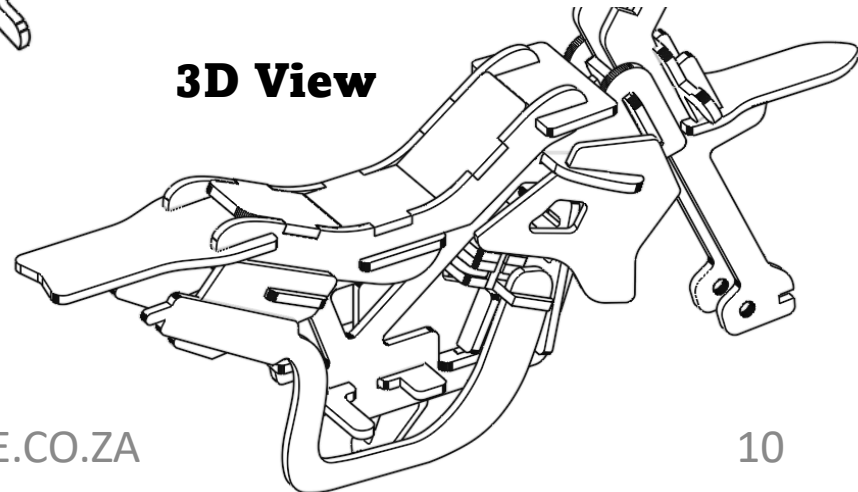



Step 09




Parts

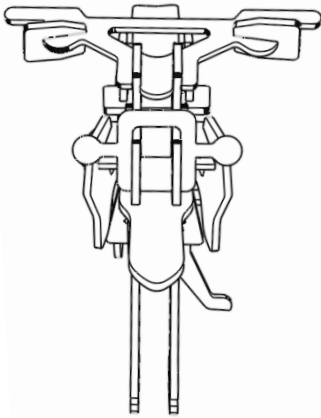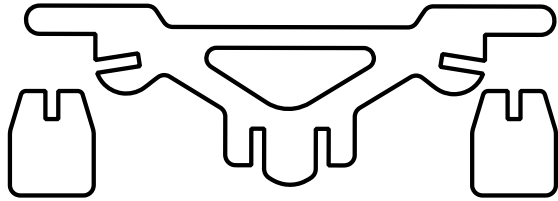

3D View


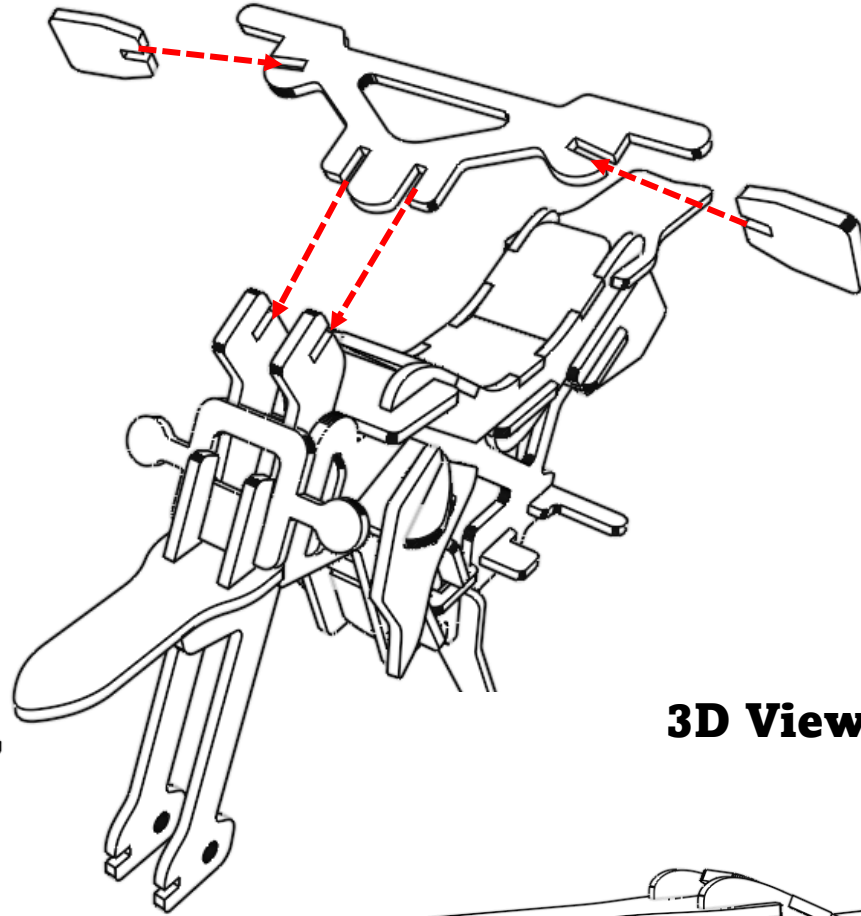
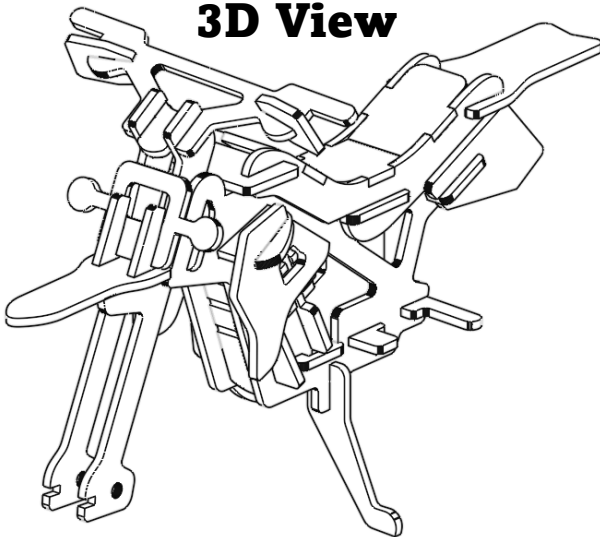


3D View


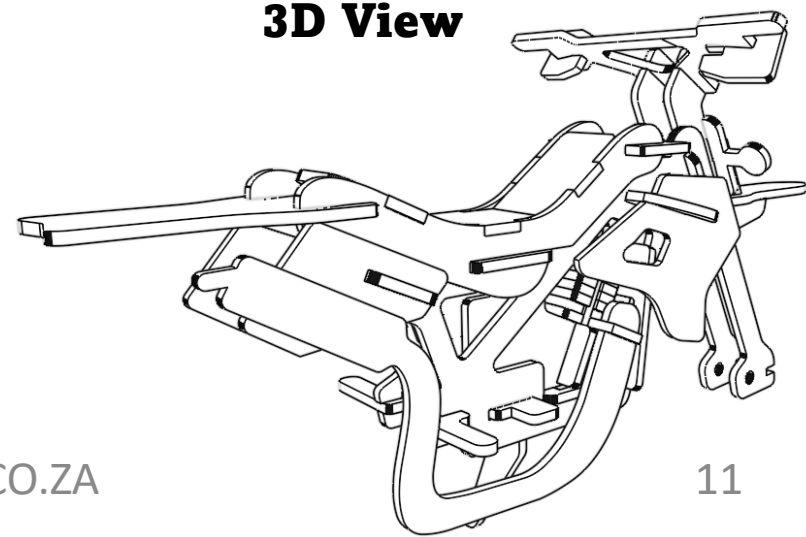


Step 10


Parts

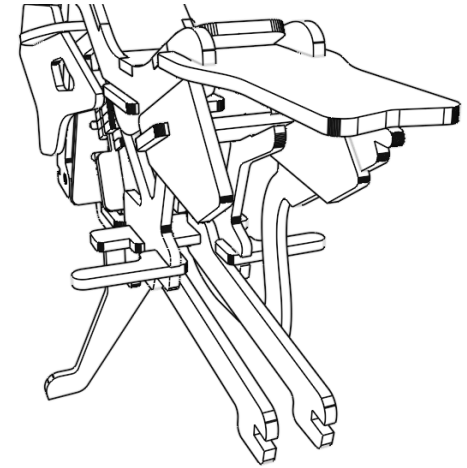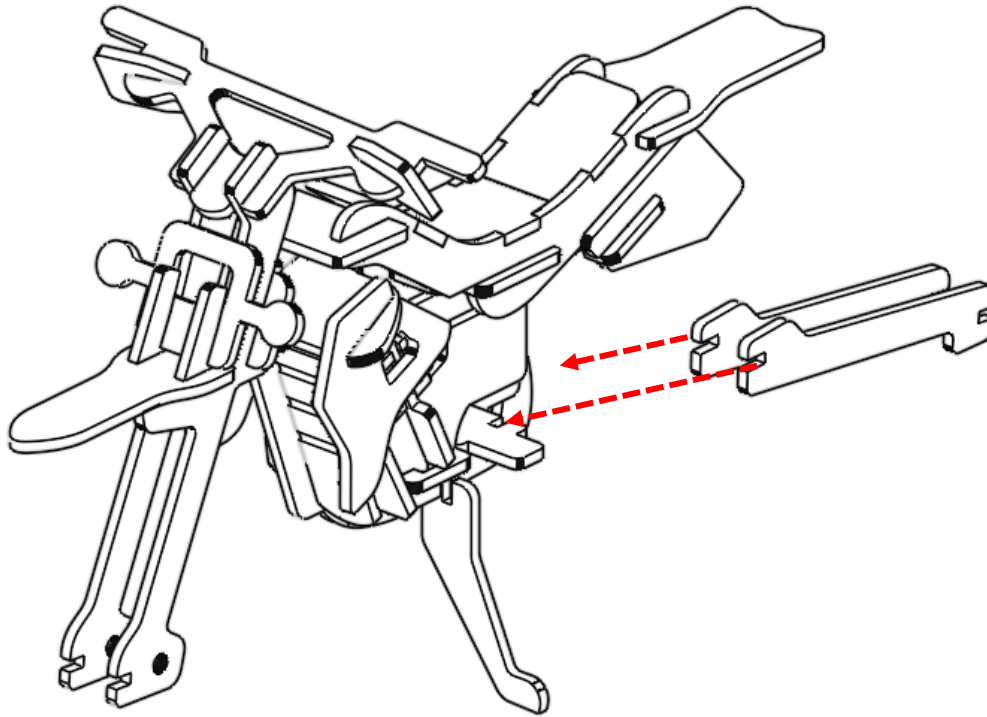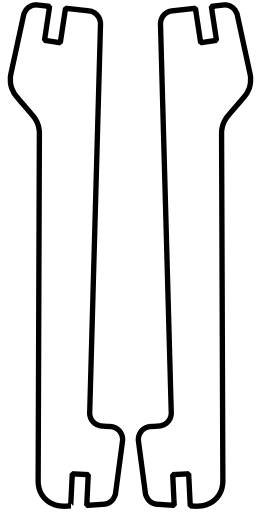

3D View



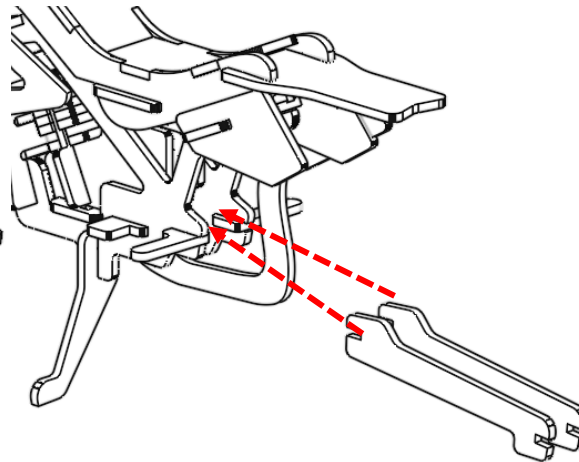
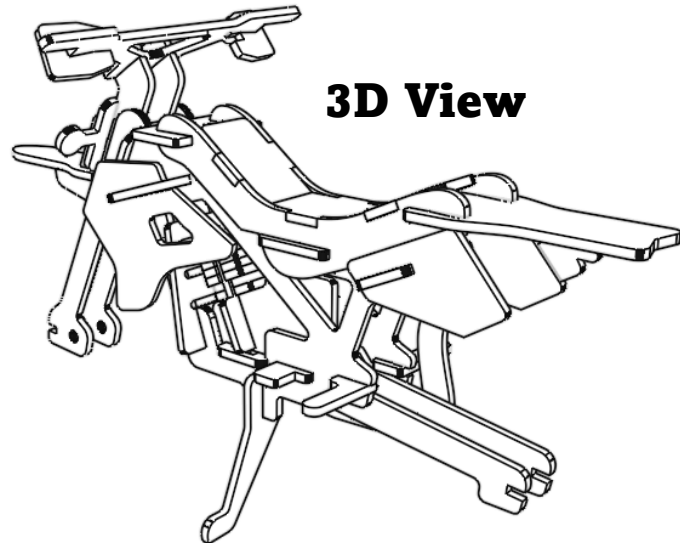


3D View


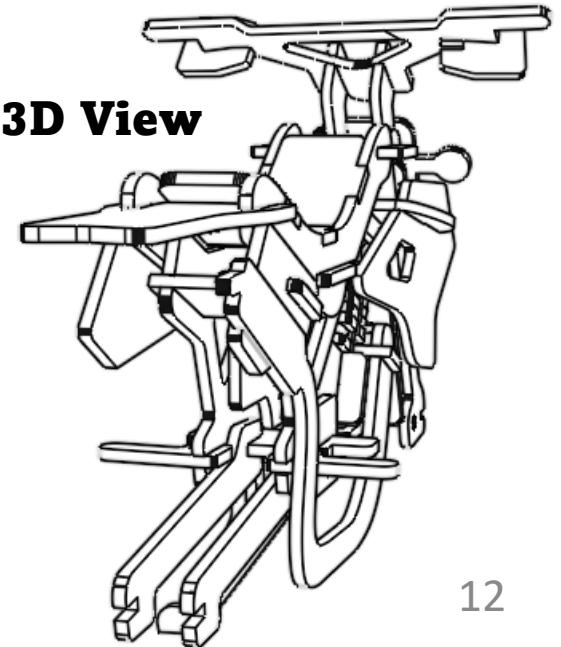


Step 11


Parts

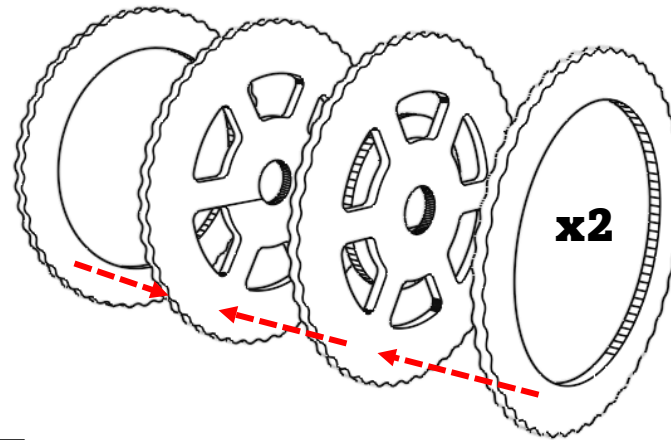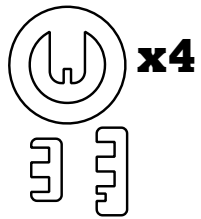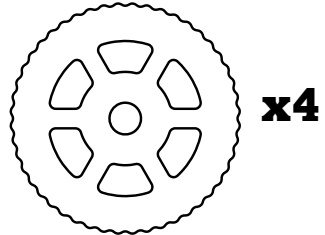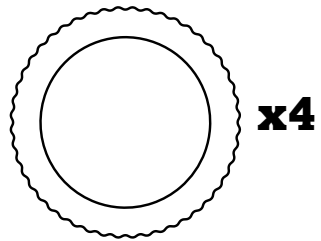


Front

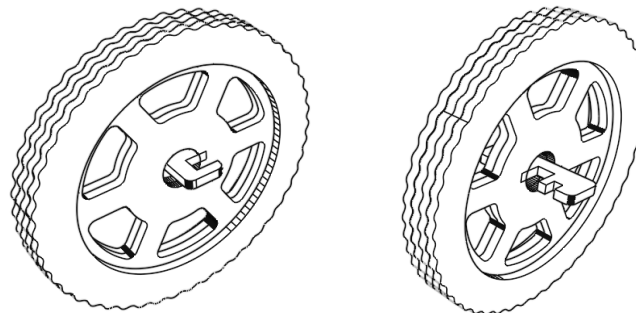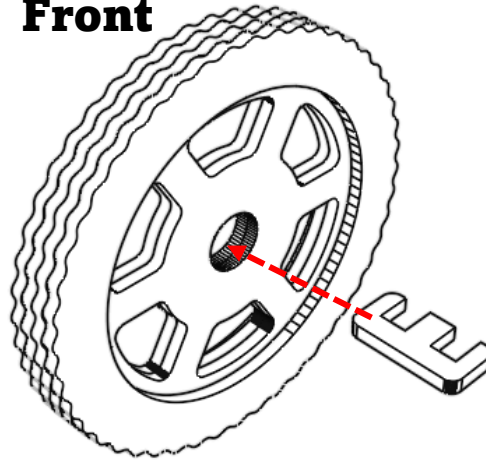


Back

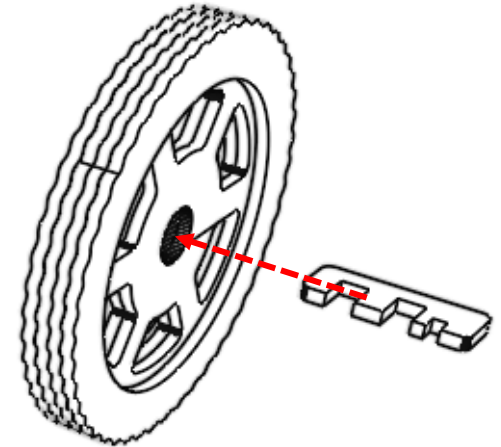

3D View








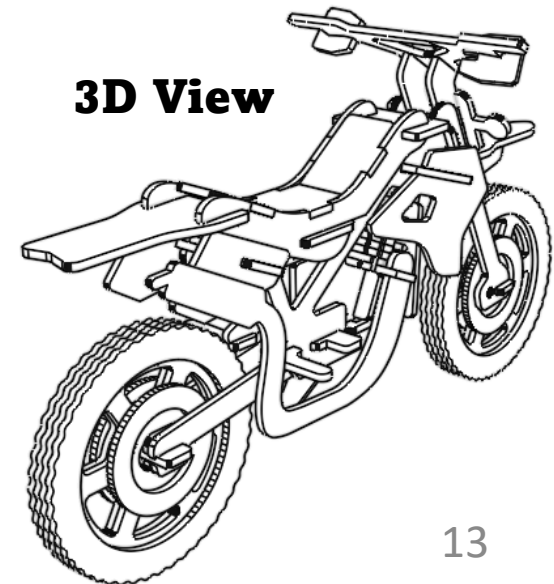


3D View

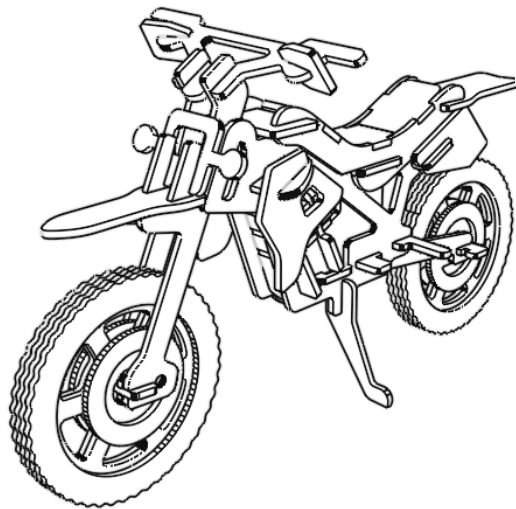


Step 12

Parts

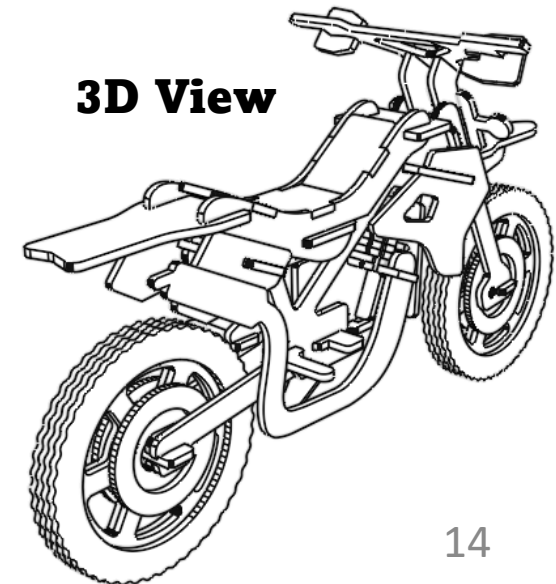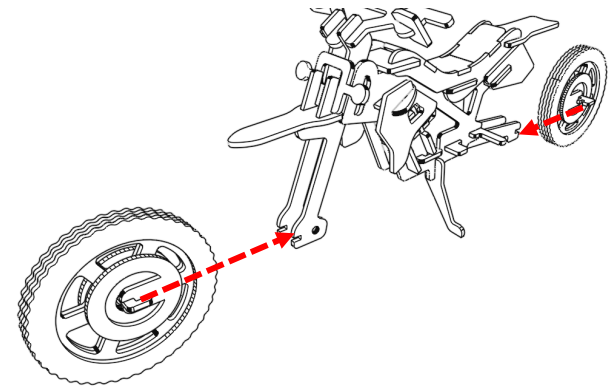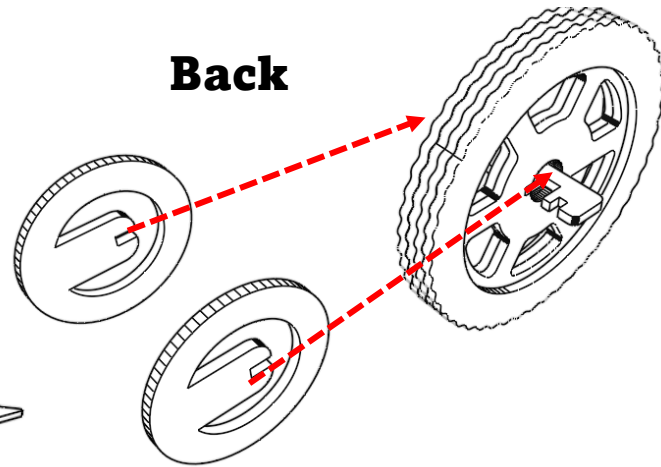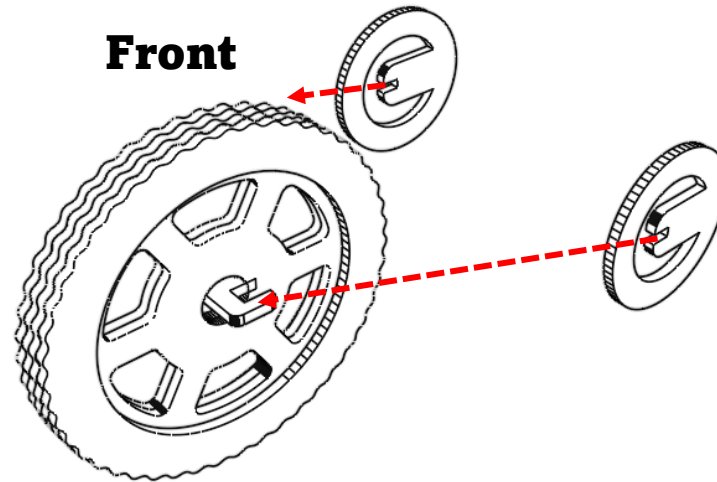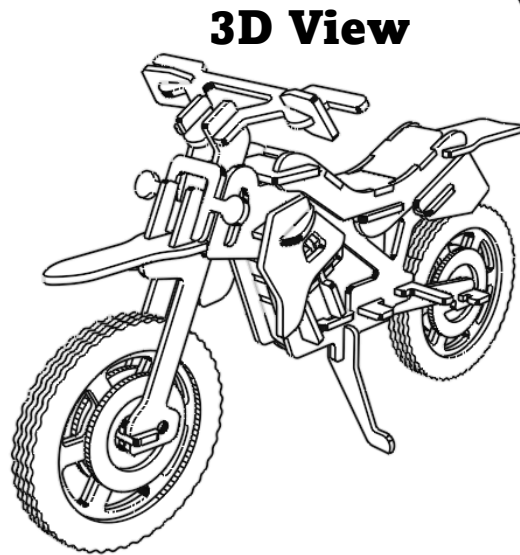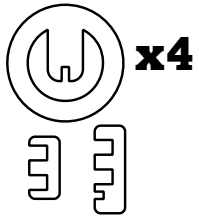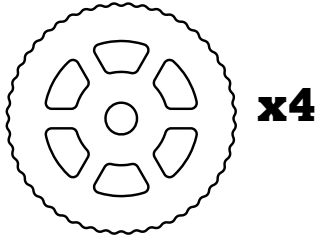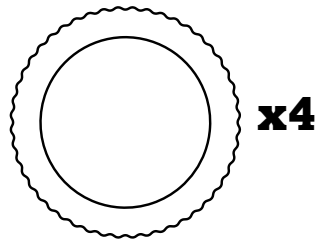


Step 12a

Parts

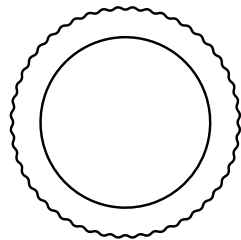

x4

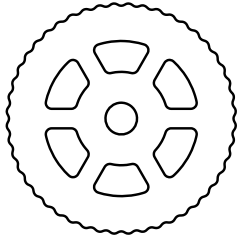






x4




x4



3D View

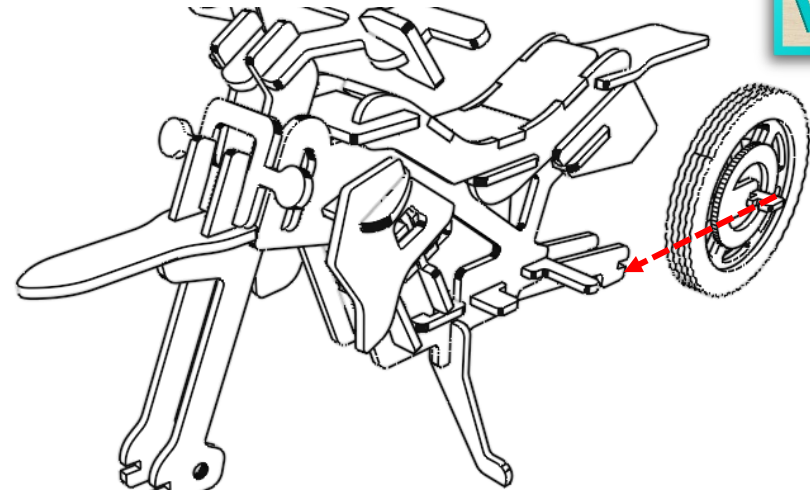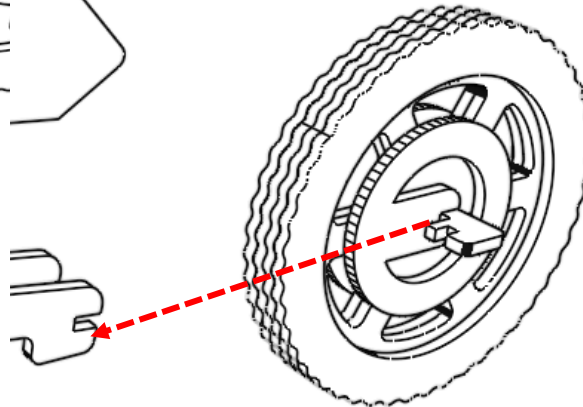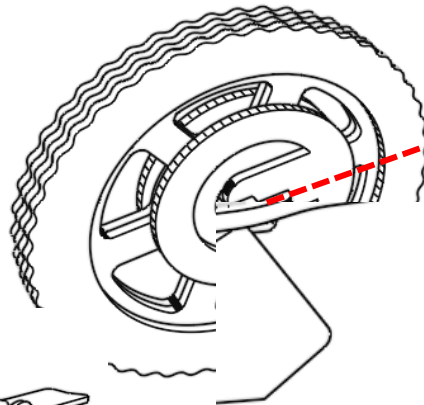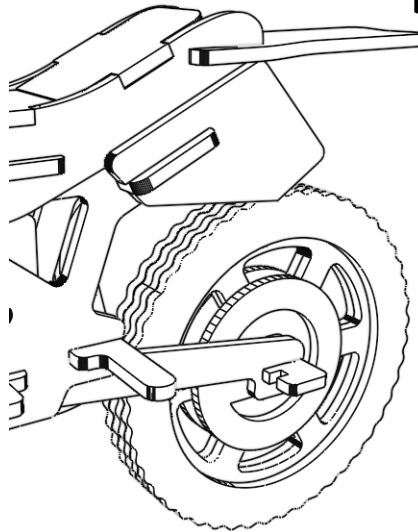
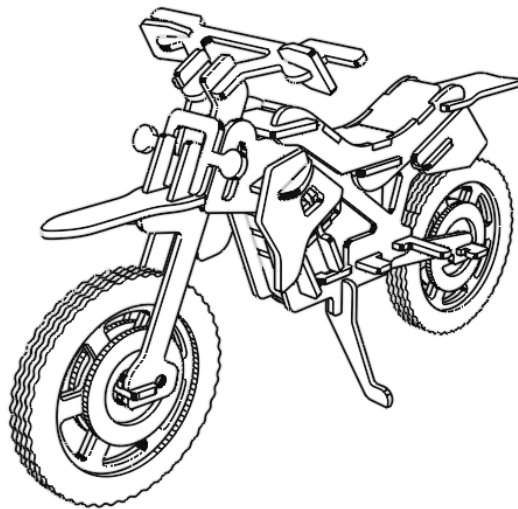


3D View

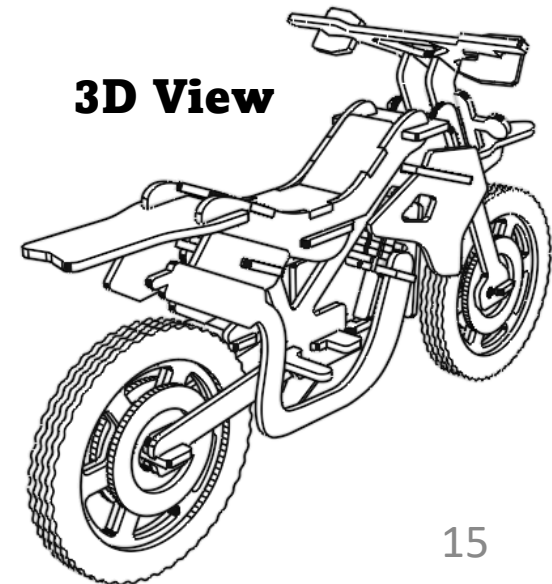

Step 13

Parts

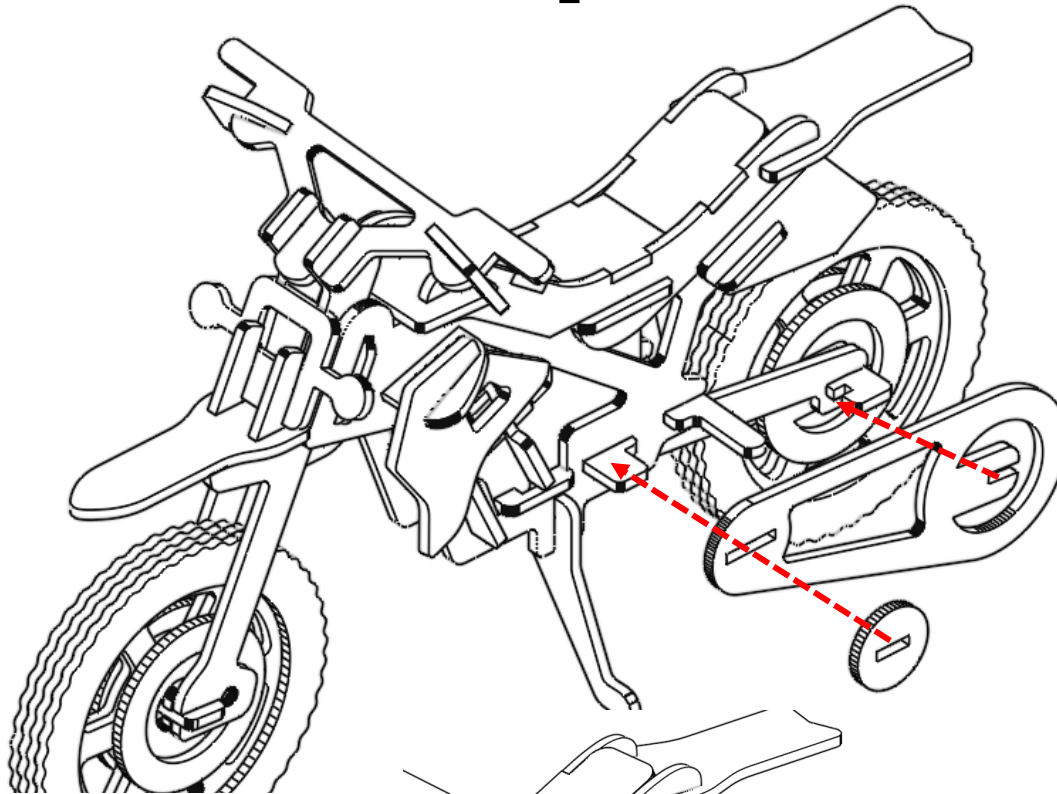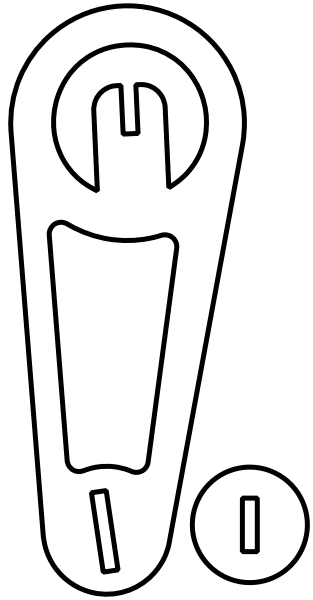

3D View

3D View

